


HT702 LED Indicators



- POWER LED** Indicates Power. Remains **ON** when power is connected
- Internet LED** Indicates Access to Internet. Remains ON while there is Access (HT701 and HT702 only)
- Link/Activity LED** Indicates if there is Activity on the Internet Port. (HT701 and HT702 only)
- PHONE LED** Indicate status of the respective FXS Ports - PHONE on the back panel
 Unregistered - **OFF**
 Registered and Available - **ON** (Solid Green)
 Off-Hook / Busy - **Blinking** every second
 Slow blinking **FXS LEDs** indicates voicemail

Connecting the HT702

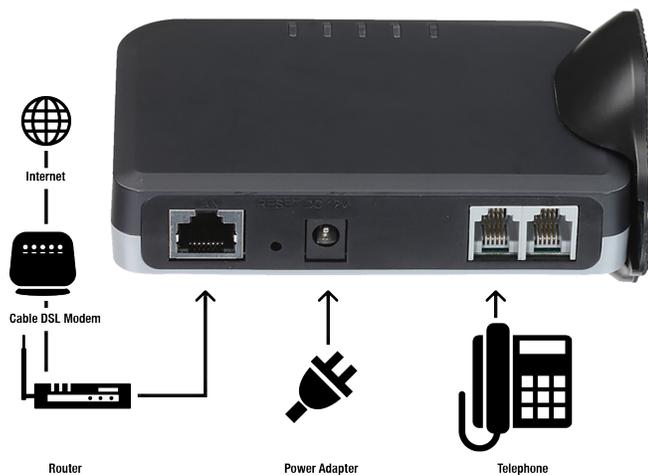

1. Connect an Ethernet cable from your cable/DSL modem to the AIRVOI HT702 adapter's 'LAN' port.
2. Connect the phone cord from your telephone to the port labeled '1' on the AIRVOI HT702 adapter.

Optional: if you have ordered a second phone line from AIRVOI, then you may connect a second telephone to the '2' port on the AIRVOI HT702 adapter.

3. Connect the power adapter to the AIRVOI HT702 adapter power jack, and into a power outlet.

Voicemail

To access your voicemail, press ***98** or the **MESSAGE** key (optional) to access your AIRVOI voicemail inbox.

Call Hold

Place a call on hold by pressing the **"Flash"** button on the analog phone (if the phone has that button). Press the **"flash"** button again to release the previously held Caller and resume conversation. If no **"flash"** button is available, use **"hook flash"** (toggle on-off hook quickly). You may drop a call using hook flash.

Call Waiting

Call waiting tone (3 short beeps) indicates an incoming call, if the call waiting feature is enabled. Toggle between incoming call and current call by pressing the **"flash"** button. First call is placed on hold. Press the **"flash"** button to toggle between two active calls.

Call Transfer

BLIND TRANSFER

Assume that call Caller A and B are in conversation. **A** wants to Blind Transfer **B** to **C**:

1. Caller **A** presses **FLASH** on the analog phone to hear the dial tone.
2. Caller **A** dials ***87** then dials caller **C**'s number, and then **#** (or wait for 4 seconds)
3. Caller **A** will hear a dial tone and may now hang up.
4. If Caller **C** does not answer the call, Caller **A** can press **"flash"** to resume call with Caller **B**.

Attended Transfer

Assume that Caller A and B are in conversation. Caller A wants to Attend Transfer B to C:

Caller **A** presses **FLASH** on the analog phone for dial tone.

Caller **A** then dials Caller **C**'s number followed by **#** (or wait for 4 seconds). If Caller **C** answers the call, Caller **A** and Caller **C** are in conversation. Then **A** can hang up to complete transfer.

NOTE: When Attended Transfer fails and **A** hangs up, the HT702 will ring back user **A** to remind **A** that **B** is still on the call. **A** can pick up the phone to resume conversation with **B**.

3-Way Conferencing

Assume that call party **A** and **B** are in conversation. Caller **A** (HT702) wants to bring third Caller **C** into conference:

1. **A** presses **FLASH** (on the analog phone, or Hook Flash for old model phones) to get a dial tone.
2. **A** dials **C**'s number then **#** (or wait for 4 seconds).
3. If **C** answers the call, then **A** presses **FLASH** to bring **B**, **C** in the conference.
4. If **C** does not answer the call, **A** can press **FLASH** back to talk to **B**.
5. If **A** presses **FLASH** during conference, **C** will be dropped out.
6. If **A** hangs up, the conference will be terminated for all three parties

when configuration **"Transfer on Conference Hang up"** is set to **"No"**. If the configuration is set to **"Yes"**, **A** will transfer **B** to **C** so that **B** and **C** can continue the conversation.

NOTE: The phone port labeled '2' is normally disabled for a single phone system and should **NOT** be used. Only use the FXS2 port if you have ordered a second phone line from the AIRVOI.



QUICK INSTALLATION GUIDE

AIRVOI VoIP ATA ADAPTER - HT702

What's In The Box:



HT702 ADAPTER



POWER ADAPTER



ETHERNET CABLE



ADAPTER STAND



QUICK START GUIDE

The above items are included in your package. If you find anything missing please contact us.

www.airvoi.com

1.855.724.7864